


**morphyrichards®**

## Ultralight bagless vacuum cleaner

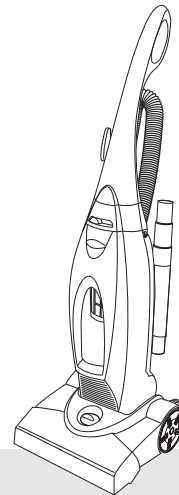

**Please read and keep these instructions**



**UK**

Helpline 0870 060 2604

Replacement parts 0870 167 6635

**Ireland**

1800 409119

getting the best from  
your new cleaner...

**If your cleaner isn't picking up as well as it should,  
please check**

- **Dust canister**

*It is important to regularly empty the canister even if it does not appear full.*

- **Filters**

*It is important that the pleated filter is shaken clean each time the dust canister is emptied to allow air through the appliance. Wash the canister filters regularly in warm water and allow to air dry. A spare pleated filter is included.*

- **Blockages**

*Check the hose, tubes and tools for blockages*

- **Belt**

*Check and replace damaged or broken belt*

- **Height adjustment**

*The height adjustment only comes into effect when the handle is released by the handle release pedal 16.*



**[www.morphyrichards.com](http://www.morphyrichards.com)**

## Important safety instructions

The use of any electrical appliance requires the following of common sense safety rules.

Primarily there is danger of personal injury and secondly danger of damage to the appliance and property. These are indicated in the instructions text by the following two conventions:

**WARNING: Danger of personal injury**

**IMPORTANT:** Damage to the appliance

In addition we offer the following essential safety advice.

### Location

- Do not use or keep this product outside when it is raining.
- Do not store the appliance near hot ovens or heating appliances.

### Mains lead

- Do not allow the mains lead to become strained or run this appliance over it.
- If the electrical cable becomes damaged the complete cable assembly must be replaced. Do not attempt this task yourself, contact Morphy Richards using the helpline number.

### Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

### Other safety considerations

- Never use in the presence of explosive liquids or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner, or other volatile substances. Never pick up acids, asbestos or asbestos dust.
- Never use the appliance without the filters installed.

- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Never modify the cleaner in any way.
- Always disconnect the appliance from the mains supply after use or prior to cleaning or emptying.
- The appliance should never be left running unsupervised.
- Repairs to electrical appliances are only to be undertaken by trained personnel. Unprofessional repairs can be dangerous for users.
- Use only genuine Morphy Richards spare parts and accessories
- Never over-extend the hose such that the cleaner is pulled over. If the cleaner is knocked over, switch off before attempting to upright.
- Never pick the cleaner up by the floor nozzle when connected to the mains, use the carrying handle.
- **WARNING: Keep loose clothing, hair, fingers etc. away from the floor nozzle whenever the cleaner is connected to the mains.**
- Disconnect from the mains supply before attempting to clear blockages, clear the brush or replace the belt.


## Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

**WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.**

Should the fuse in the 13 amp plug require replacement, a BS1362 13 amp fuse must be fitted.

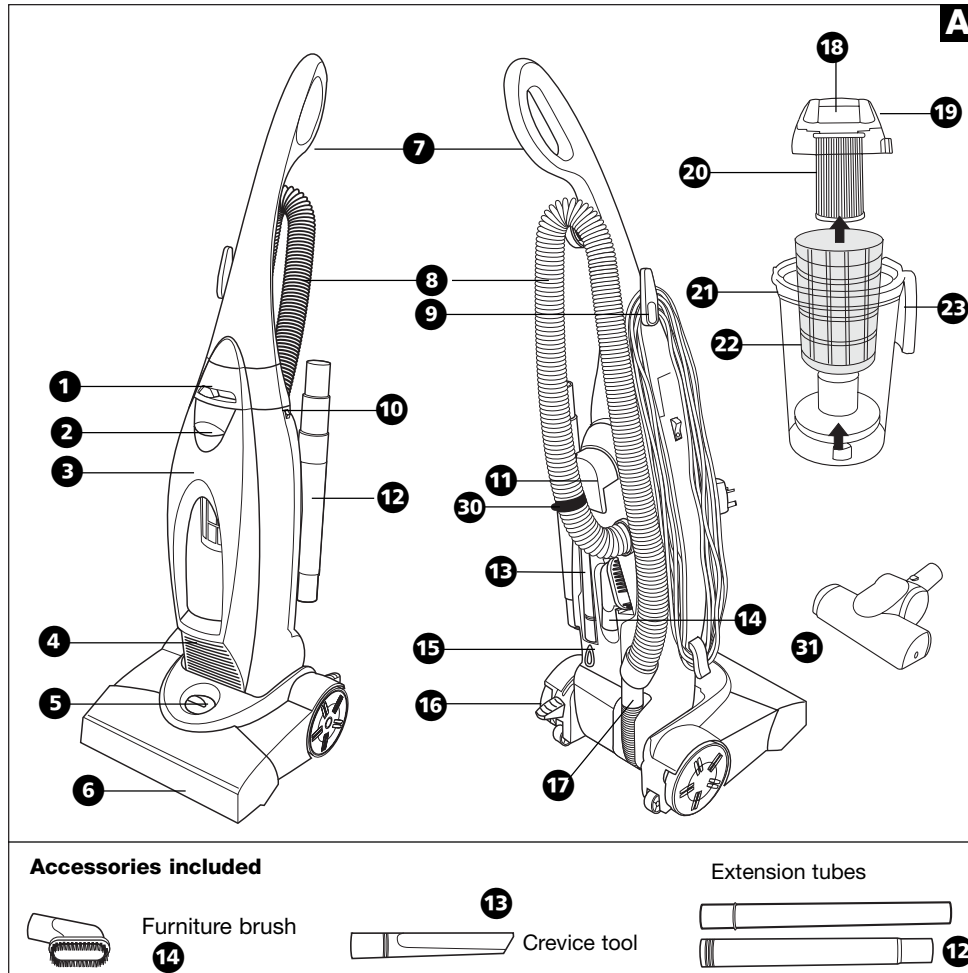

## Features

- 1 Vari power slider (certain models only)
- 2 Front cover release
- 3 Removable front cover
- 4 Exhaust filter grille
- 5 Carpet height adjustment knob
- 6 Floor nozzle with powered brush
- 7 Upper handle
- 8 Flexible hose
- 9 Cord storage with quick release cleat
- 10 On/Off switch
- 11 Carrying handle
- 12 Nested extension tubes (2)
- 13 Crevice nozzle
- 14 Furniture brush
- 15 Hose clip slot

- 16 Handle release pedal
- 17 Hose connector
- 18 Dust canister release (shown page 5)
- 19 Dust canister lid
- 20 Pleated circular filter
- 21 Dust canister
- 22 Central mesh filter
- 23 Canister handle
- 24 Motor protection filter (shown page 6)
- 25 Exhaust filter (page 6)
- 26 Belt cover (shown page 7)
- 27 Brush bar (page 7)
- 28 Motor shaft (shown page 7)
- 29 Brush bar end caps (shown page 7)
- 30 Hose clip
- 31 Turbo nozzle

## Assembly

**WARNING: Do not plug in the cleaner until it is assembled.**


- 1 Carefully unpack all components.
- 2 Lift cleaner body to upright position.
- 3 Remove the two screws that are already attached to the body.
- 4 From the rear of the cleaner, align the handle with groove and slide into the body. If necessary, use thumb and finger pressure to slide handle into position.
- 5 Fasten the handle with the two screws.



## Floor nozzle height adjustment

Before using the cleaner the floor nozzle height must be set to the correct height.

Choose the setting which most closely matches your floor surface.

- Use the DEEP CARPET setting when using the tools.

Note: The height adjustment only comes into effect when the handle is released by the handle release pedal .

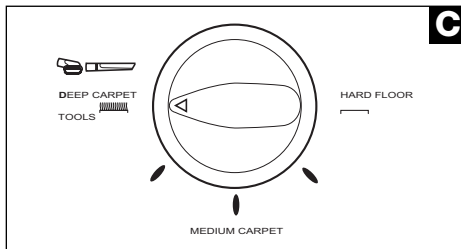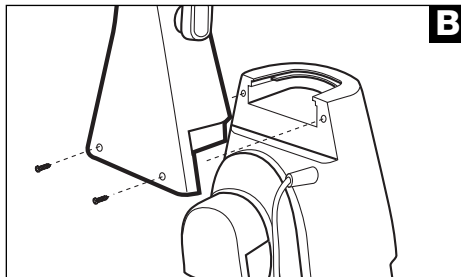

4

## Variable power

(Certain models only)

Slide the variable power control to the right to increase the suction power or to the left to decrease suction. This feature is most useful when using the hose and accessories. Use the minimum setting when vacuuming delicate fabrics/curtains etc. When not using the hose it is advisable to keep the variable slider set to maximum.

## Using on carpets





- 1 Place cleaner in its upright position.
- 2 Set the carpet height adjustment knob to the desired position.
- 3 Release the mains cable by revolving the quick release cleat  $\frac{1}{2}$  a turn and extend the cable fully.
- 4 Plug the cable into the mains socket.
- 5 Step on the handle release pedal to release the handle to the desired position.
- 6 Press the on/off button to the 'on' position.


IMPORTANT: To prevent damage to carpets, never leave the cleaner switched on in one place for an extended period.

- Never have the brushes set too low such that the cleaner is hard to push.

## Using attachments

Follow steps 1-4 (using on carpets) but set the carpet height adjustment knob to deep carpet setting.

- 5 Remove the hose connector  from the rear of the cleaner. Lift the hose  from the top handle hook. Insert the hose clip  into the hose clip slot .

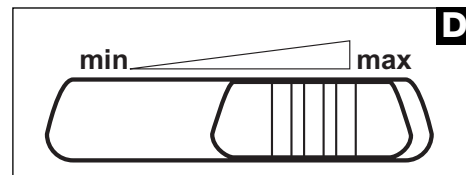

- Push the required attachment firmly onto the end of the hose.
  - If additional length is required, attach one or both extension tubes.
  - 6** Switch on/off.
  - **IMPORTANT:** Always fix the hose clip **30** to the main body slot **15** when using the hose and tools.
  - Never over extend the hose such that the cleaner is pulled over.
- IMPORTANT:** Turning the cleaner sideways helps prevent the cleaner being pulled along by the stretch hose.

### Using & cleaning turbo nozzle


Attach the turbo nozzle to the hose end for use on upholstery and stairs.

After use your turbo nozzle may become clogged. Turn over the nozzle and pull away any hairs or fibres. If they are tightly wound around the brush carefully snip the fibres with scissors, being careful not to damage the brush bar, pull away from the brush bar and dispose.

## Emptying


Empty the dust canister regularly even if it does not look full this will maintain the performance.

- 1** Remove the front cover by lifting the cover release lever. **F**
- 2** Lift-up the dust canister release and pull the canister away from the main body.
- 3** Take the canister to the dustbin.
- 4** Turn the lid  $\frac{1}{4}$  turn anti-clockwise to unlock, lift off the lid with pleated filter **20**, put to one side. **F**
- 5** Lift out the central mesh filter **22** from the dust canister **G**. Brush clean if necessary.
- 6** Empty out the dust canister **21**.
- 7** Re-fit the central mesh filter.
- 8** Shake the pleated filter to remove all dust.
- 9** Re-fit pleated filter with lid into the dust canister and turn lid  $\frac{1}{4}$  turn clockwise to lock.
- 10** Re-fit dust canister into cleaner and push to lock into position. Then re-fit front cover.

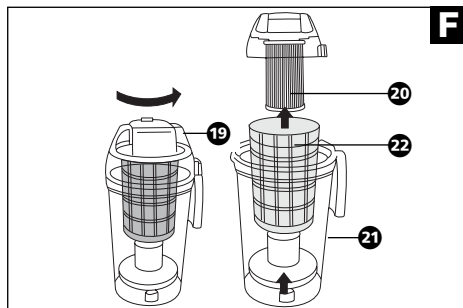

## Safety cut-out

If the cleaner overheats a motor protection thermostat will automatically switch the motor off. If this happens, **switch the cleaner off, unplug from the power supply and leave the cleaner to cool for at least 30 minutes.** Check the airways for blockages, empty dust canister and clean the filters before restarting.

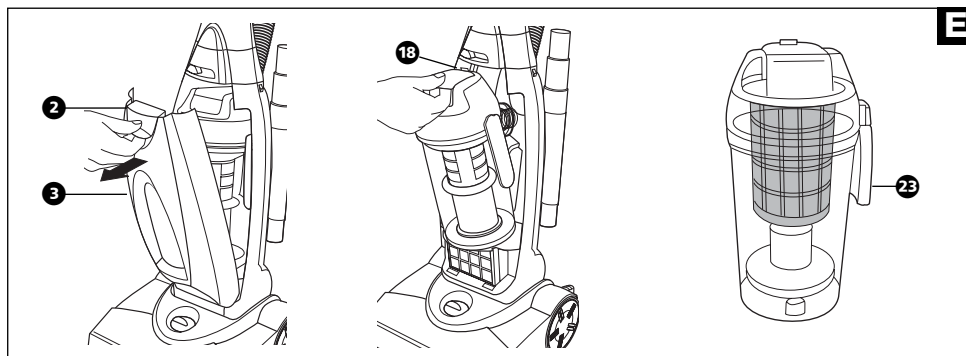


## Cleaning the filters

**To maintain suction the pleated filter must be shaken clean each time the dust canister is emptied.** Failure to clean the filter will reduce suction and could damage the motor if used for a prolonged period. This may invalidate the guarantee. If the filters become damaged they must be replaced.


### Pleated filter

This must be shaken clean at every emptying to maintain suction. To thoroughly clean it wash it regularly.

To remove it from the dust canister lid turn the filter  $\frac{1}{4}$  turn anti-clockwise. **I** Wash in warm water (no detergent) and allow to air dry before refitting. The spare pleated filter allows one filter to be washed and dried whilst the other is in use.

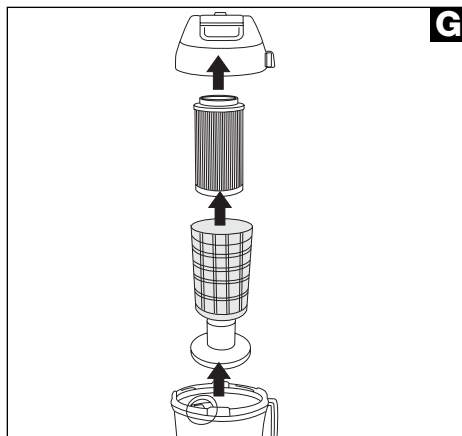

6

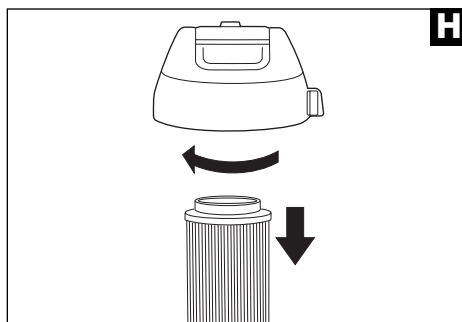

### Motor protection filter **I**

The motor protection filter **24** is located underneath the dust canister

- 1** Remove the dust canister.
- 2** Lift out the filter and shake over a dustbin.

The filter may also be washed in water (no detergents) but must be totally dry before re-fitting.

- 3** Replace the filter

### Exhaust filter **I**

The exhaust filter is located below the dust canister compartment.


- 1** Remove the front cover.
- 2** Remove the exhaust filter **25** by pulling forward at the top and lift it away.
- 3** Take the filter out of the cage and shake vigorously over a dustbin. The filter may also be washed in warm water. Do not use detergents. The filter must be completely dry before re-fitting. Allow filters to air dry naturally.
- 4** Replace the filter and front cover.

## Changing the belt

If the brush bar stops rotating it is likely that the drive belt has snapped (usually because the brush has been stalled). A spare belt is supplied. Replacement belts can also be obtained from Morphy Richards.

### Removing the floor nozzle cover **II**

- 1** Disconnect the cleaner from the mains supply.





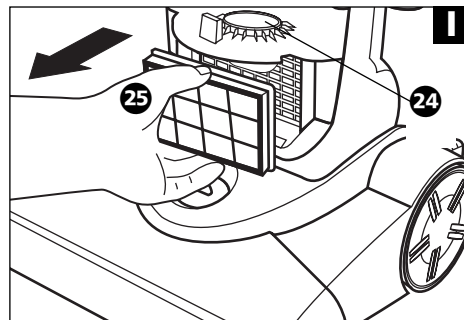


- 2 Press the handle release pedal and place the cleaner face down, in the flat position on a soft surface (eg carpet).
- 3 Use a cross-head screwdriver to remove the four screws indicated **J**.
- 4 Turn the cleaner over.
- 5 **While pressing the handle release pedal** lift the rear of the top cover, unhook from the front then completely remove the cover **K**.

### Replacing the belt **L M**

- 6 Lift off the belt cover **26**.
- 7 Gently pull the right hand side (belt side) of the floor nozzle outwards and at the same time lift the brush bar out of its location **M**.
- 8 If the belt has broken, ensure all pieces are removed. Clean the motor shaft **28**.
- 9 Check the brush bar end caps. **29**
- 10 Fit the left hand end cap into the floor nozzle.
- 11 Fit the right hand end cap onto the brush bar.
- 12 Place one end of the new belt over the motor shaft and the other around the pulley end of the brush.

- 13 Locate the left hand side of the brush bar first, then while pulling the right hand side of the nozzle gently outwards and stretching the belt, lower the right hand side of the brush into its location.
- 14 Rotate the brush by hand to ensure it is correctly and securely located.
- 15 **IMPORTANT:** Re-fit the belt cover.
- 16 Replace the top cover, hooking it in at the front first and by **pressing the handle release pedal** to allow the rear to correctly locate **N**.
- 17 Turn the cleaner face down and re-fit and tighten the four fixing screws, do not overtighten.
- 18 Return the cleaner to its correct working position before re-testing.

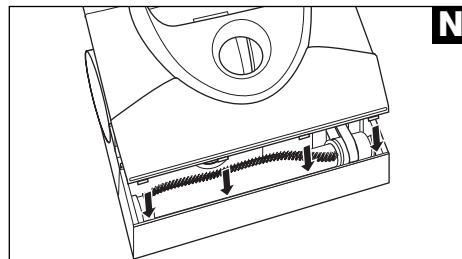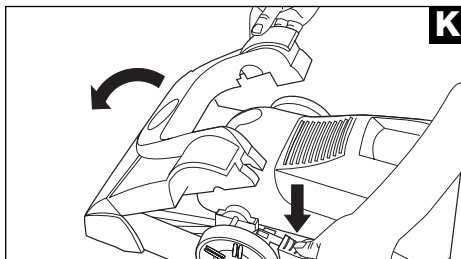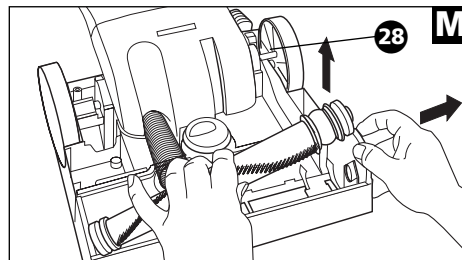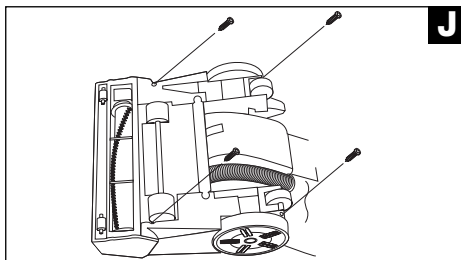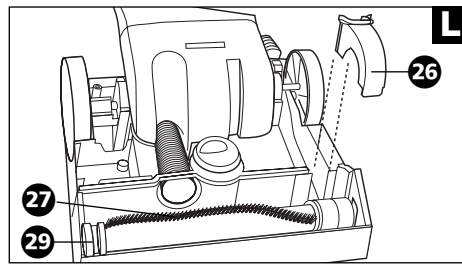

## Your two-year guarantee

- **It is important to retain the retailers receipt as proof of purchase.** Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.                      Serial no.

All Morphy Richards Products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the helpline number quoting model number and serial number on the product, or write to Morphy Richards at the address shown. You will be asked to return the product (in secure, adequate packaging) along with a copy of proof of purchase. Subject to the exclusions set out below (1-6), the faulty appliance will then be repaired or replaced and dispatched usually within seven working days of receipt.

If for any reason this item is replaced during the 2-year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of initial purchase.

To qualify for the two-year guarantee the appliance must have been used according to the manufacturers instructions. For example the filters shall have been regularly cleaned as instructed.

Morphy Richards shall not be liable to replace or repair the goods under the terms of the Guarantee where:

### EXCLUSIONS

- 1 The fault has been caused or is attributable to accidental use, mis-use, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non-domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 6 Consumables such as the filters and belt are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.

*Morphy Richards products are intended for household use only*

*Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.*

**morphy richards®**

The After Sales Division,  
Registered address,  
Morphy Richards Ltd, Mexborough,  
South Yorkshire, England, S64 8AJ

### Helpline (office hours)

UK 0870 060 2604

Republic of Ireland 1800 409119

VC73322M UK Rev 2 01/05